



SawInspect System 6
Compact sawing and inspection system
for crimp cross section analysis

QUALITY ASSURANCE

SawInspect System 6

Concept

The Schleuniger SawInspect System 6 (SIS 6) is an extremely compact device for crimp cross section analysis. It's the only one of its kind that combines three different highlights:

- The precision cutting of the SPU 6
- The high quality microscope of the MZU 1.3
- The electrolyte staining of the ESU 6

Within a few quick steps, users can create cross sectioned samples. The individual sample is placed in the holder and aligned with the saw blade. The unique blade provides a cut that does not require polishing after the sample is cut. After cutting, the sample holder is quickly moved from the blade to the microscope with the use of guide rails. The sample holder rotates 90° allowing a perfect view of the cross sectioned sample.

All parameters of cross sectioned contacts can be measured and analyzed with the CrimpLab analysis software. Measurements are performed manually when using the CrimpLab Standard software. The job management feature allows all measurement parameters to be stored for easy recall and test accuracy. The optional CrimpLab Automatic software includes fully automatic contour recognition and measurement of B-crimps. All measurement parameters can be captured in seconds with just a few clicks.

Processing steps and motions have been minimized to provide the fastest results.

Application


The SIS 6 can be used as a stand-alone system or mounted on a CrimpCenter automatic cut, strip, terminate machine. A variety of sample holders and the optional 0.2 mm VHM cutting blade make it possible to process a many different crimp contacts.

Special Features

- Compact design with minimized processing movements and steps for fastest results
- Complete cross section analysis and job management CrimpLab software
- Full analysis in seconds after just a few clicks with CrimpLab Automatic software

Options

- 0.2 mm width VHM saw blade
- Different sample holders/clamps
- CrimpLab Automatic analysis software

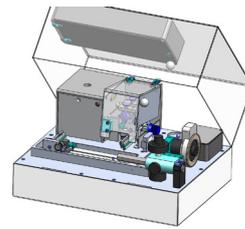

SIS 6 Mobile

Technical specifications	
Terminal Height	9 mm (0.35")
Blade Type	VHM / 40 x 0.4 mm
Camera Resolution	USB 2.0 / 1.3 Megapixel
Lighting	LED Ring Light
View	1.8 x 1.5 mm up to 11.7 x 8.7 mm (0.07 x 0.06" up to 0.46 x 0.34")
Lens and Zoom	Macro Zoom / 10
Cleaning Process	Electrolytic staining
Cleaning Material	Felt cloth or pen tips
Cleaning Agent (pH)	KMF EL 7 (6.5 – 7)
Analysis Software	CrimpLab® Standard / CrimpLab® Automatic (optional)
Operating Temperature	0° - 50° C (32° - 122° F)
Power Supply	90 – 264 VAC, 47-63 Hz, 170 W
Dimensions (L x W x H)	320 x 290 x 400 mm (12.6" x 11.4" x 15.8")
Weight	ca. 15 kg (33 lbs.)
Safety	IP 20
CE-Conformity	The SIS 6 fully complies with all CE and EMC equipment guidelines relative to mechanical and electrical safety and electromagnetic compatibility.